



1	Active/Standby
2	Clock/Display Press to display or turn off the channel call, clock, etc.
3	Program Info Press to display detailed information on the current digital program
4	Operation Guide Press to display the operation guide
5	Terrestrial digital select BS select CS select Internet channel
6	Channel select Press to select a channel. Use to input a number for various settings
7	Audio switching Press to switch to secondary audio if available
8	Volume up (+) down (-)
9	Mute
10	Linked data broadcast
11	Channel up (Λ) / down (V)
12	Input select
13	Record
14	Recording list
15	Caption
16	Display tool menu
17	Record and Play control
18	Current/rewind
19	Fast-forward/next
20	Pause/freeze
21	Color Use to operate EPGs and data program screens
22	EPG Press to display or turn off the Electronic Program Guide(EPG:番組表)
23	Contents (Other on-air programs)
24	Famalink
25	Voice Search
26	Cursor (up, down, left right) Enter/Confirm
27	Exit
28	Home
29	Return Press to go back to the previous screen
30	Direct buttons
31	Microphone