

# TV Remote Control

## SHARP 4TC-50BL1



Button Name	
①	Active/Standby • Press to engage the TV set in the active or standby mode.
②	Clock/Display • Press to display or turn off the channel call, clock, etc.
③	Program info • Press to display detailed information on the current digital program.
④	Caption
⑤	Terrestrial digital select
	BS select
	CS select
	4K select
⑥	Channel select • Press to select a channel. Use to input a number for various settings.
⑦	Audio switching • Press to switch to secondary audio.
⑧	Volume up (+)/down (-) • Press to adjust the volume.
⑨	Mute • Press to mute audio.
⑩	Linked data broadcast • Press to call the data broadcast linked with the current digital TV program.
⑪	Channel up ( $\wedge$ )/down ( $\vee$ ) • Press to select channels in the ascending or descending order.
⑫	Input select • Press to select the input.
⑬	Record
⑭	Display the Tool Menu
⑮	Record and Play control



Button Name	
⑬	<b>Rewind</b> <ul style="list-style-type: none"> <li>Press to rewind. When press repeatedly, the speed gets faster.</li> </ul>
⑭	<b>Fast-forward</b> <ul style="list-style-type: none"> <li>Press to fast-forward. When press repeatedly, the speed gets faster.</li> </ul>
⑮	<b>Freeze</b> <ul style="list-style-type: none"> <li>Press to pause the watching recorded program on Familink Recorder or USB HDD.</li> <li>While watching TV program, press to watch stopped image and normal reproducing image on dual screen.</li> <li>By setting "AQUOS Time-shift" in "Settings" - "Familink setting" - "Operation of freeze key(AQUOS Time-shift)", you can pause the watching TV program and then watch from the continued by press the key again. It is necessary to connect a corresponding recorder.</li> </ul>
⑯	<b>Color</b> <ul style="list-style-type: none"> <li>Use to operate EPGs and data program screens.</li> </ul>
⑰	<b>Familink</b> <ul style="list-style-type: none"> <li>Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.</li> </ul>
⑱	<b>EPG</b> <ul style="list-style-type: none"> <li>Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.</li> </ul>
⑳	<b>Recording list</b>
㉑	<b>Contents</b> <ul style="list-style-type: none"> <li>Press to display the EPG for currently on-air programs only.</li> </ul>
㉒	<b>Google Assistant</b>
㉓	<b>Application</b>
㉔	<b>Home</b> <ul style="list-style-type: none"> <li>Press to display the home screen.</li> </ul>
㉕	<b>Cursor (up, down, left, right)</b> <ul style="list-style-type: none"> <li>Use to select a menu item, column, etc.</li> </ul>
	<b>Enter/Confirm</b> <ul style="list-style-type: none"> <li>Press to confirm a selected setting or menu item.</li> </ul>
㉖	<b>Exit</b> <ul style="list-style-type: none"> <li>Press to finish menu operation, etc.</li> </ul>
㉗	<b>Return</b> <ul style="list-style-type: none"> <li>Press to go back to the previous screen.</li> </ul>
㉘	<b>Direct button</b>
㉙	<b>Microphone</b>