
Washing Machine SHARP ES-H10C


How to wash and dry:

- 1. Insert clothes
- 2. Power on
- 3. Press the switch button to choose between washing, drying or both. (Optional: Customize program)

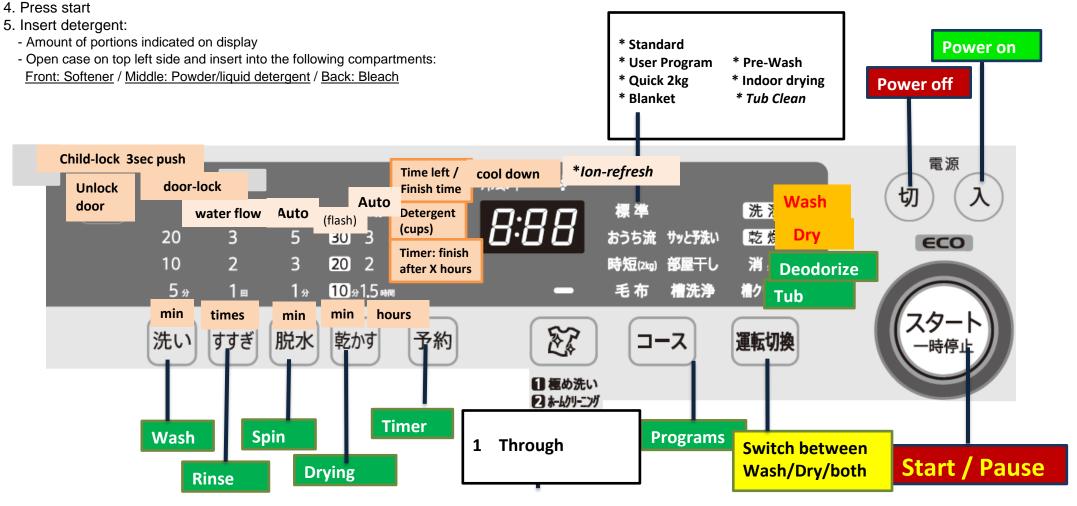

*Clean filters regularly

see back page

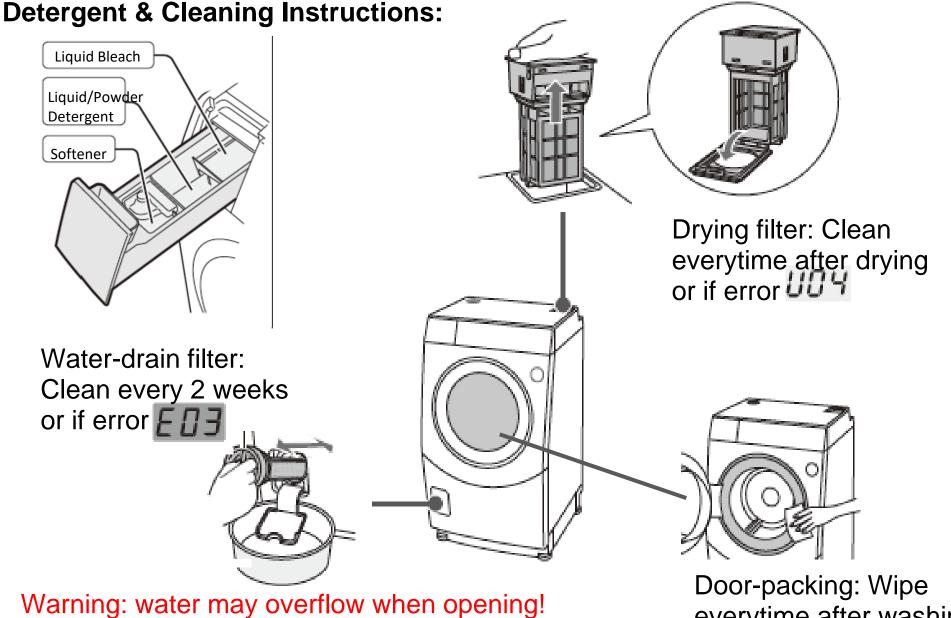

Door-packing: Wipe everytime after washing