

Wash

Wash-and-Drv

Dry

How To Use

1, Load clothes, close the door tightly, and press [ON]

2, Choose [Mode] and [Course], then press [Start].

3, The display shows how much detergent you need to put in 20 seconds.

e.g. half of the detergent cap

- 4, Put detergent (and fabric softner) into the case.
- 5, Starts automatically, then it beeps when it's done. Press [Door-lock release] to open.

How to Use Timer

- 1, Load Clothes, close the door and press [ON].
- 2, Choose [Mode] and [Course], then press TIMER
- 3, Use $V \Lambda$ key to set timer. (e.g. "8" means after 8 hours it's done)
- 4, Press [Start] and put detergnet.

CAUTION

* Wash load maximum: 7kg
* Dry load maximum: 3.5kg

** Wash and Dry must be under 3.5kg

