

Microwave Oven Instructions (MRO-TS8 HITACHI)

How to use **microwave/grill**:

1. Press Microwave/Grill button (microwave: several times to choose W)
2. Adjust time (10min/1min/10sec → press several times to add up)
3. Start

How to **steam**:

1. Fill up the water tank up to the line
2. Press steam button
3. Press microwave/oven/grill button
4. Adjust time and press start


How to use **oven**: (do not use table plate)

1. Press Oven button (two times for no pre-heat)
2. Adjust temperature and time
3. Start (if pre-heat on; press start again after pre-heat finishes)

How to use the **menu** programs:

1. Choose menu category/item and press start

Note: Some programs need pre-heat. When pre-heat finished, insert food and press start again

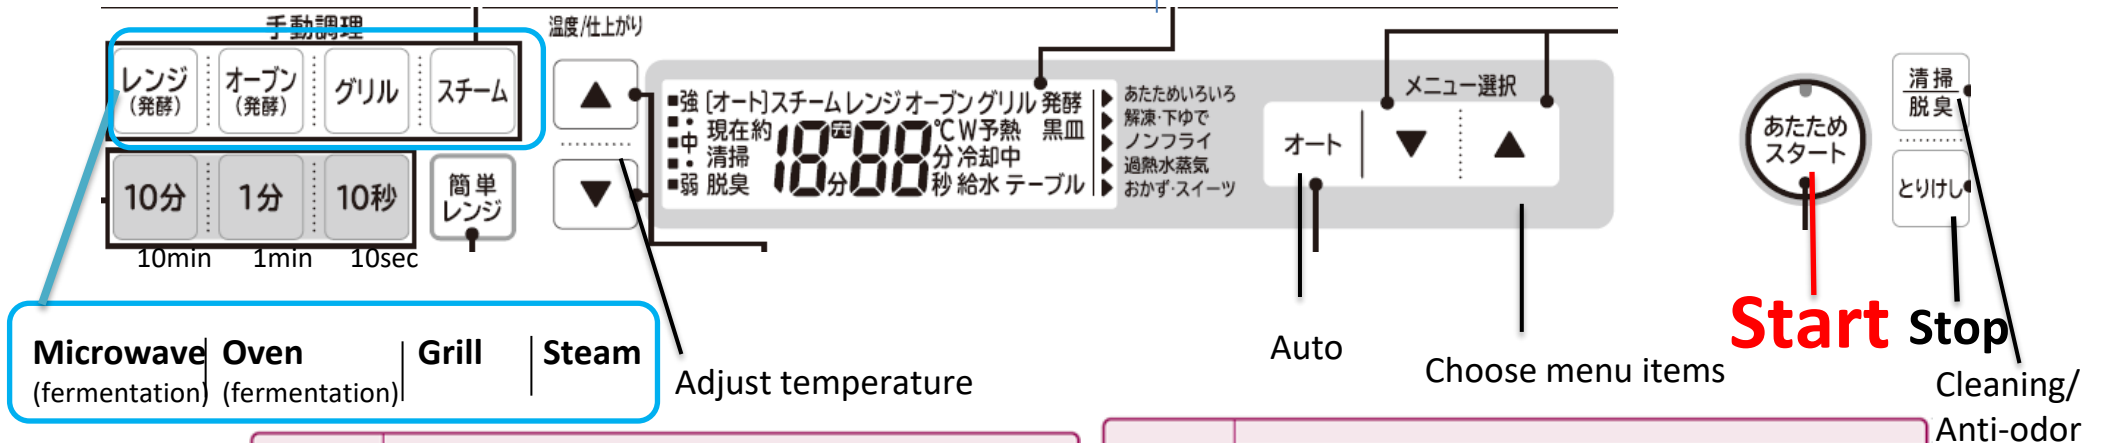

| | Tableplate | Black plate | Grill net | Water tray |
|---------------|------------|-------------|----------------------|------------|
| Microwave | ○ | × | × | Empty |
| Steam+Microw. | ○ | × | × | Full |
| Grill | × | ○ | Place on black plate | Empty |

| | Tableplate | Black plate | Grill net | Water tray |
|-------------|------------|-------------|----------------------|------------|
| Steam+Grill | × | ○ | Place on black plate | Full |
| Oven | × | ○ | Place on black plate | Empty |
| Steam+Oven | × | ○ | Place on black plate | Full |